WCD456,WCD456S COIN ACCEPTOR INSTRUCTION MANUAL

This Coin Acceptor is designed for replacement of the old coin slide with start mechanism or coin drop on Generation 4, Generation 5 and Generation 6 timer model Washers ,Both voltages AC 100V-240V 60Hz.



Generation 4



WCD456



WCD456S



Generation 5



WCD456



WCD456S



Generation 6



WCD456



WCD456S

Price Setting Chart
1 Locate the desire price
2 Move dip switches for that price to “ON” position

Switch position					Unit price set
1	2	3	4	5	
					$0.25
ON					$0.50
	ON				$0.75
ON	ON				$1.00
		ON			$1.25
ON		ON			$1.50
	ON	ON			$1.75
ON	ON	ON			$2.00
			ON		$2.25
ON			ON		$2.50
	ON		ON		$2.75
ON	ON		ON		$3.00
		ON	ON		$3.25
ON		ON	ON		$3.50
	ON	ON	ON		$3.75
ON	ON	ON	ON		$4.00
				ON	$4.25
ON				ON	$4.50
	ON			ON	$4.75
ON	ON			ON	$5.00
		ON		ON	$5.25
ON		ON		ON	$5.50
	ON	ON		ON	$5.75
ON	ON	ON		ON	$6.00
			ON	ON	$6.25
ON			ON	ON	$6.50
	ON		ON	ON	$6.75
ON	ON		ON	ON	$7.00
		ON	ON	ON	$7.25
ON		ON	ON	ON	$7.50
	ON	ON	ON	ON	$7.75
ON	ON	ON	ON	ON	$8.00

Specification:

- Model: WCD456 Vers. 4.0
  WCD456S Vers. 4.0
- Voltage: DC12V
- Coin Type: US 0.25
- Price Setting: 0.25 increse ($0.25~$8.00)
- Memory: No

Warning:Turn off the power before installation

Step 1:Remove the old coin slide or coin drop by loosing the holding bolt.
Step 2:For Coin meter housing with removable Funnel & Bracket.

① Installing with WCD456 ,Remove Funnel & Bracket.


② Installing with WCD456S ,leave the Bracket on ,Remove the Funnel.
For Coin meter housing with Non-removable Funnel & Bracket.
Only can be install with WCD456S.



Removable Funnel & Bracket




Non-removable Funnel & Bracket

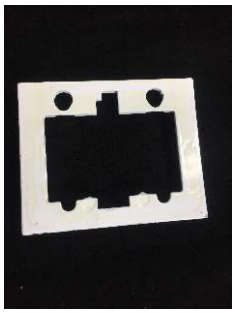


Bracket part # 962875

Step 3:Set the price on the Coin Acceptor (See Price setting chart)
Step 4:Unplug the connector of the Start mechanism and may remove it or leave it on it is position.
Step 5:Mount the Coin Acceptor and secure it by tighten the holding bolt.
Step 6:Plug the connector from the Coin Acceptor the same way as the old Start Mechanism or Coin Drop connected before.
Step 7:For AC 110V Washer, connect the transformer input wires to power supply L1 & N or Connect the transformer input wires to the power input side of the relay.

For AC 220V Washer, connect the transformer input wires to power supply L1 & L2 or Connect the transformer input wires to the power input side of the relay.
Step 8:Turn on power.
Step 9:If the coin drop does not start after deposited Quarters, swap the blue & green wire on one end.

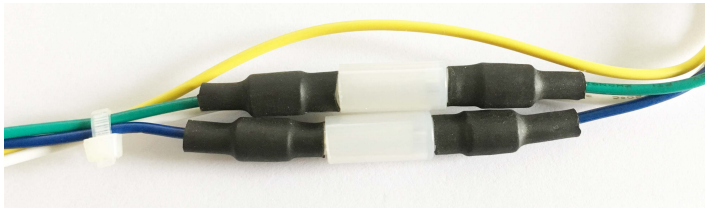

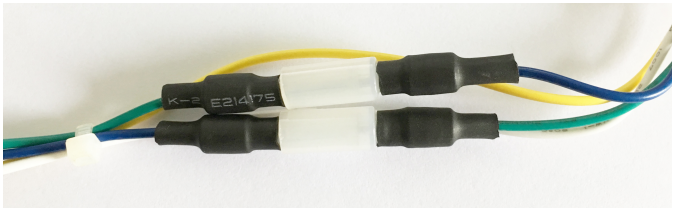

There is no memory on this Coin Acceptor, in case of power outage or malfunctioning, turn off and turn on power to start over again.

